

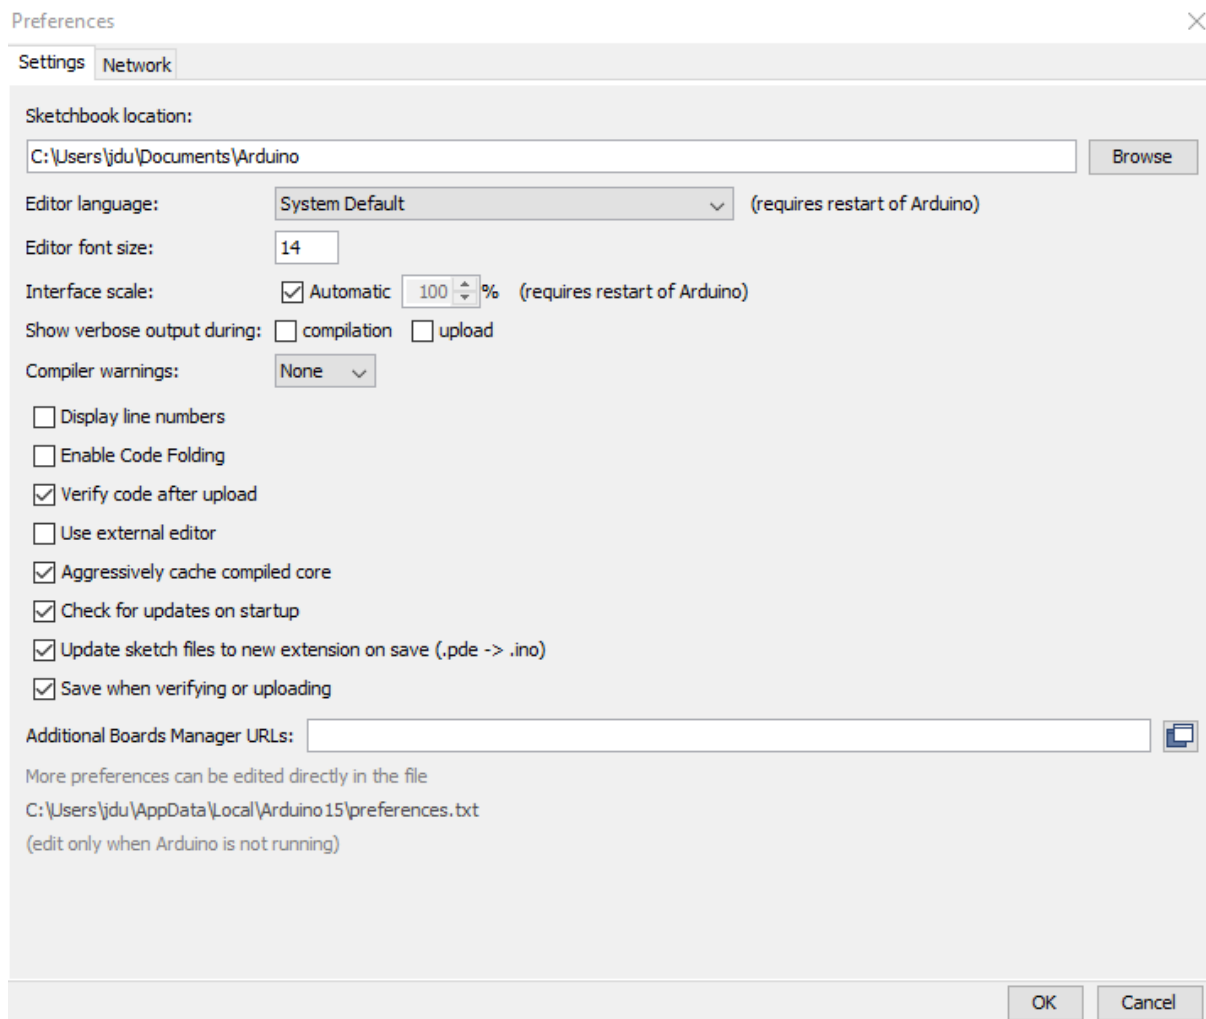


Add the ATtiny to the library using an URL link.

Select File - Preferences

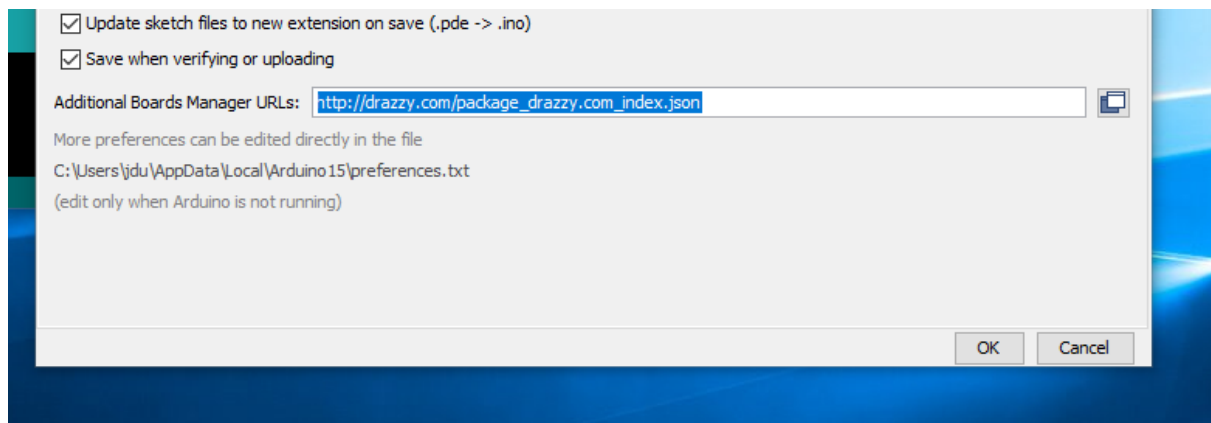

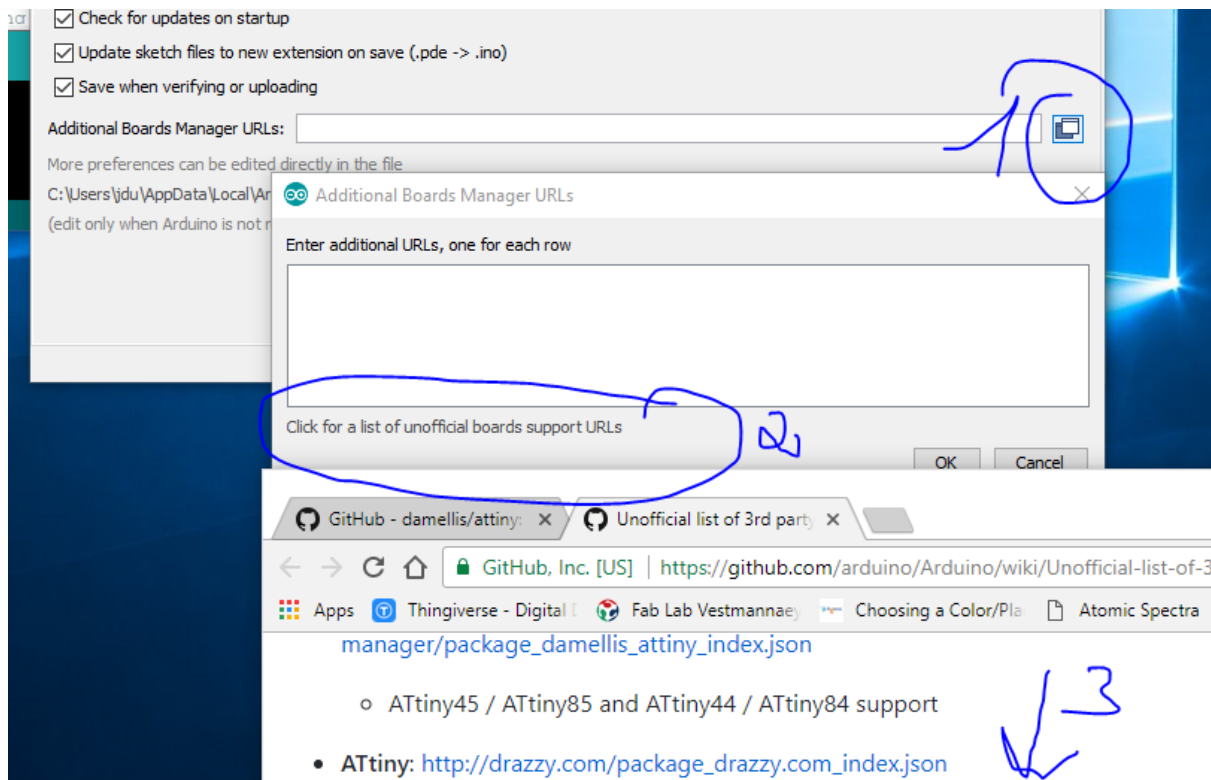

Now the ATtiny will appear under tools -boards-board manager


Install ATtinyCore by Spence Konde version 1.1.5

<http://highlowtech.org/?p=1695>


The pin numbering in Arduino software

http://fabacademy.org/2018/docs/FabAcademy-Tutorials/week8_embedded_programming/attiny_arduino.html

ATtiny45 / ATtiny85

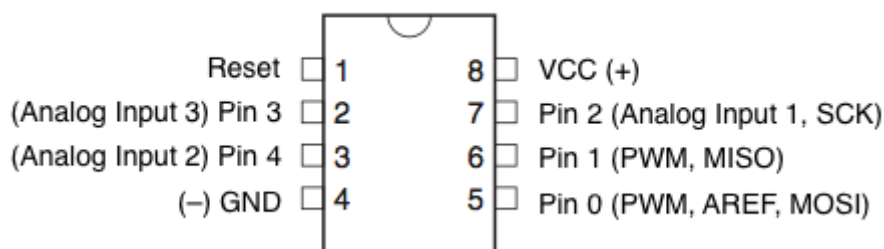

ATtiny44 / ATtiny84

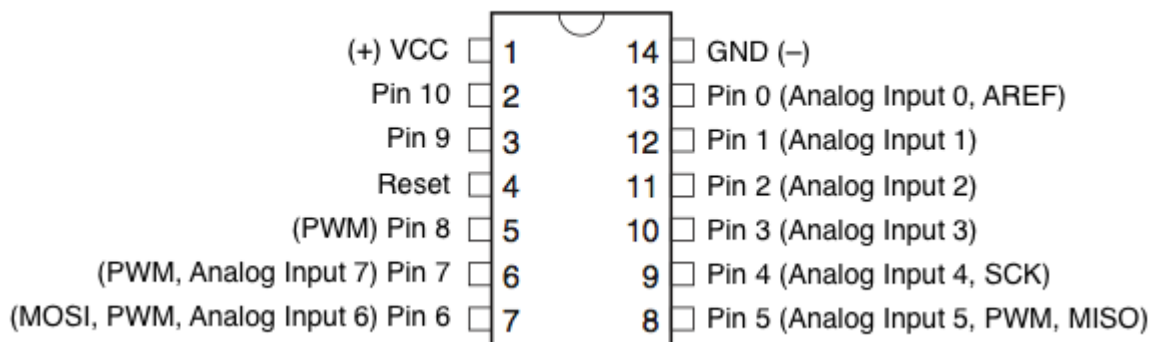

Reference

The following Arduino commands should be supported:

- [pinMode\(\)](#)
- [digitalWrite\(\)](#)
- [digitalRead\(\)](#)
- [analogRead\(\)](#)
- [analogWrite\(\)](#)
- [shiftOut\(\)](#)
- [pulseIn\(\)](#)
- [millis\(\)](#)
- [micros\(\)](#)
- [delay\(\)](#)
- [delayMicroseconds\(\)](#)
- [SoftwareSerial](#) (has been updated in Arduino 1.0)